

SUPPLYPAK

Bulk Lamp Recycling Box Assembly Instructions

**Questions regarding this container should be directed to customer
service, toll-free at 1-888-669-9725**

SUPPLYPAK ASSEMBLY INSTRUCTIONS

THE INSTRUCTIONS MUST BE FOLLOWED FOR SAFE PACKING, STORAGE AND SHIPMENT OF THIS CONTAINER.


Bulk Lamp Recycling Box (Applies to Supply-262)

Required Safety Supplies:

Veolia recommends the user of this service to utilize gloves and safety glasses when handling any kind of hazardous materials.


Assembly and pallet (not included) required. Call 1-888-669-9725 if you are missing any components.

STEP #1- Unpack Container

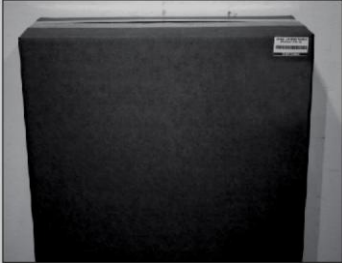


Your SUPPLYPAK container will be delivered in one container. Unpack your SUPPLYPAK Bulk Lamp Recycling Box and take inventory of the component pieces listed to the right.

STEP #2- Verify Components

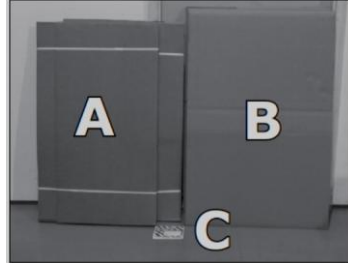

Your SUPPLYPAK container should consist of A- (2) Two Half RSC Boxes, B- (8) Eight Cut Half RSC Tubes and C- one Universal Waste Label.

STEP #3- Tape Half RSC Boxes

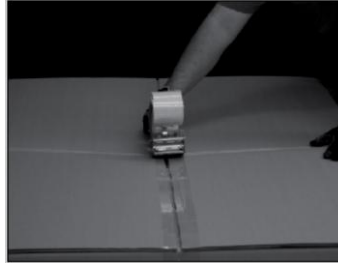


Locate one of the two Half RSC boxes. Fold flaps and tape all bottom seams. Tape using a "H" pattern. DO NOT TAPE the second Half RSC box at this time.

STEP #4- Place Half RSC Box on Pallet



Place the one taped Half RSC Box on a standard 4 foot pallet.

STEP #5-Tape Cut Half RSC Tubes

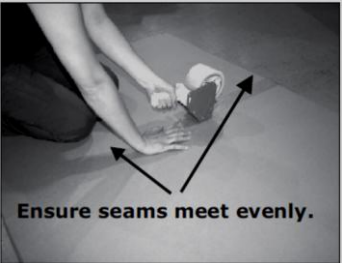

Place Cut Half RSC Tubes (Item #B) on ground and match up bottom and top. With tube tightly aligned, tape where top and bottom meet. Tape both sides. Repeat for other three tubes.

STEP #6- Tape Bottom of Half RSC Tubes



Locate, fold flaps and tape the bottom of all 4 assembled Half RSC tubes (Item #B).

STEP #7- Insert All Half RSC Tubes into Palletized Half RSC Box



Insert (4) four assembled and taped Half RSC tubes into taped Half RSC Box.

STEP #8- Slide Taped Half RSC Box over Top of Half RSC Tubes



Slide second Half RSC Box (Item#A) over top of the assembled Half RSC Tubes.

STEP #9-Tape Middle Seam of Half RSC Boxes



Tape around the SUPPLYPAK where the two Half RSC Boxes meet.

STEP #10-Apply Universal Waste Label



Locate and apply the provided Universal Waste Label. Complete as required.

STEP #11- Fill Assembled Box with Fluorescent Lamps



With the top flaps opened. Carefully add intact fluorescent lamps. Keep flaps closed in between filling.

STEP #12- Seal Box When Ready For Shipment



When box is full, close top flaps and seal by taping all seams. Tape using an "H" pattern. Ensure the box is secured to the pallet with shrink-wrap.